

10 x Disposable Barbecue or Braai (BBQ) Picnic Size



Description

Comes in a box with 10 x Picnic Size Disposable Braais. Complete braai with charcoal and grid. Lights with a single match. Very convenient, clean and easy to use.

Normal size, 300mm (L) x 240mm (W) x 55mm (H), disposable barbecue filled with instant light charcoal. Very convenient, because it lights with just one match. After lighting, the barbecue is ready to cook in 20 minutes. This product is ideal to sell together with specialized meat products in stores.

- Lights with a single match
- No fire lighters needed
- Ready to cook in 20 minutes
- Clean and easy to use
- No more cleaning of barbecues
- Very light weight

6 x Disposable Braai or Barbecue (BBQ) Party Size



Description

Comes in a box containing 6 x Party Size Disposable Braais. For the BIG occasion. Complete braai with charcoal and grid. Lights with a single match. Very convenient, clean and easy to use.

Large size, 490mm (L) x 297mm (W) x 70mm (H) size disposable barbecue filled with instant light charcoal. Very convenient, because it lights with just one match. After lighting, the barbecue is ready to cook in 20 minutes. This product is ideal to sell together with specialized meat products in stores. Comes with a stand.

- The most superior way of barbecuing
- Comes with a stand
- Lights with a single match

- No fire lighters needed
- Ready to cook in 20 minutes
- Clean and easy to use
- No more cleaning of barbecues
- Very light weight
- Ideal for the big occasion

HOW TO USE DISPOSABLE BRAAIS

LIGHTING

1. Remove from cardboard tray.
2. Place your Picnic BBQ on a firm level heat-resistant surface such as bricks, or use a purpose-built stand (included with product). Allow air to circulate beneath the tray.
3. This Picnic BBQ has a specially impregnated starter sheet under the wire grill; **DO NOT** use petrol or any lighter fluids.
4. With a lit match, light one corner of the starter sheet.
5. Depending upon wind conditions, it will take about 15 minutes for the smoke to die down.

COOKING HINTS

1. Do not cook before the fuel has a coating of ash. This is when the ideal cooking temperature has been achieved and will be maintained for over an hour (under normal conditions).
2. **REMEMBER** - Cook over heat **NOT** over flames.
3. Do not leave cooking food unattended as it may burn. Turn food frequently.

WARNING

1. **DO NOT** handle or move the BBQ whilst in use, as it gets very hot very quickly and retains heat even after it appears to have gone out.
2. Keep children and pets at a safe distance. Use only with adult supervision.
3. **NEVER** use on a surface which is liable to be damaged by heat.
4. **DO NOT** use indoors or without adequate ventilation.
5. **DO NOT** attempt to relight the BBQ by using spirit, petrol or comparable fluids.
6. **DO NOT REFILL** - This BBQ is designed for a single use only.
7. When cooking is over, completely extinguish the barbecue with water.
8. **REMEMBER**, the area beneath your barbecue will also be hot.
9. When cold, dispose of this single-use barbecue carefully and responsibly, or take it home with you.

CONTACT:

Tel: 034 413 1780

Email: info@heystekgroup.co.za

Contact person: Christine Theunissen